



IRRICONTROL

ASSEMBLY INSTRUCTIONS

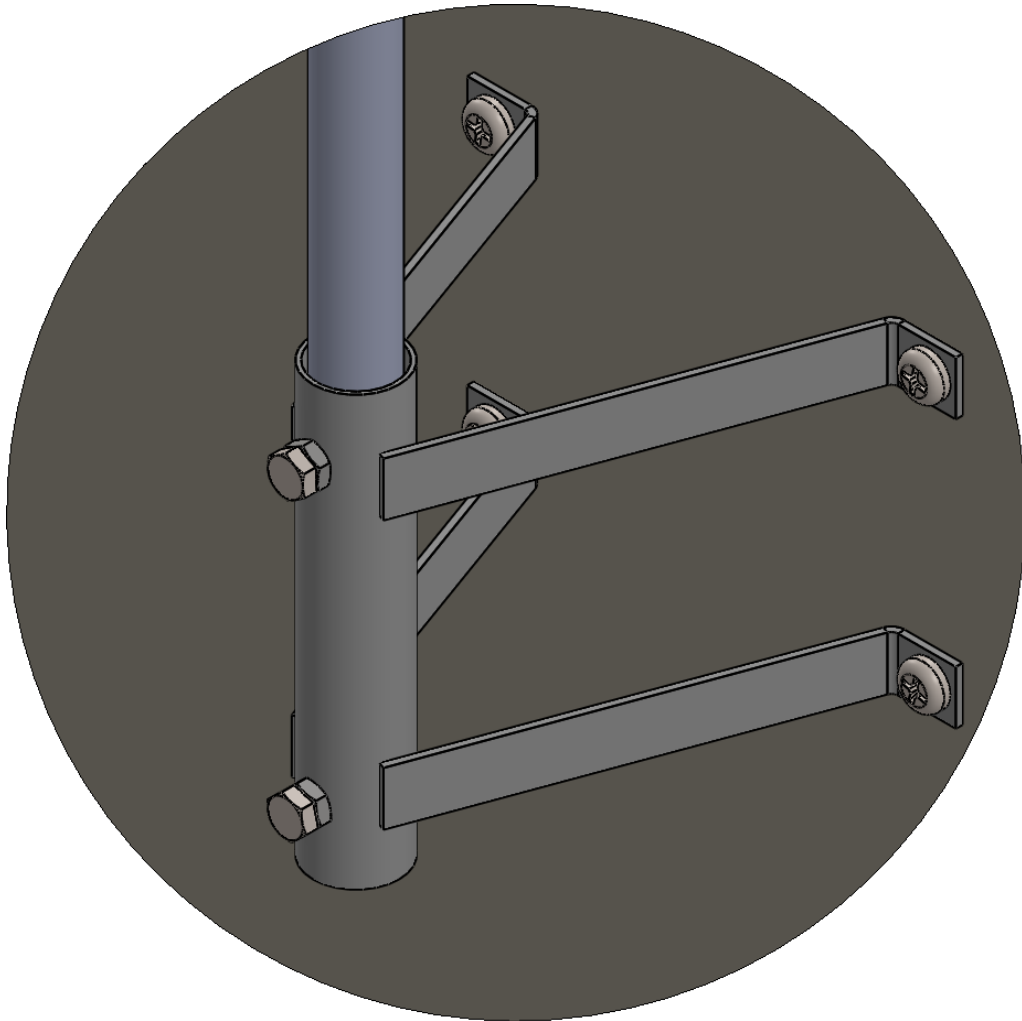

Picture 1: Wall support mounting

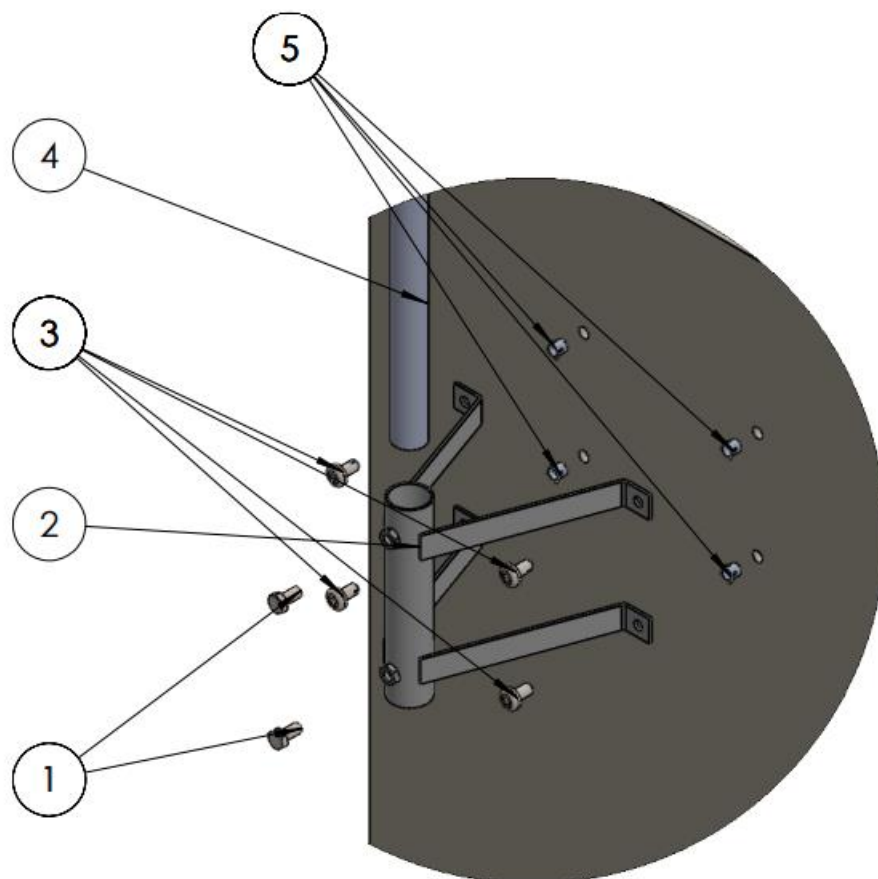

Picture 2: List of parts used


ITEM NUMBER	PART NAME	QUANTITY
1	Hex Screw M8x15mm	2
2	Wall Support	1
3	Self-tapping Screw M8x30mm	4
4	1m Tube	1
5	Plastic Anchor Bolt Sleeve M8	4
6	U Clamps Set	2
7	D Clamps Set	2

Note: When the equipment is a solar repeater, 3 U type clamps and 2 D type clamps must come with the order.


The D type clamps are only included when the equipment has the small china box.

1

First, the wall must be drilled with an M8 drill to place the plastic anchor bolt sleeve M8.

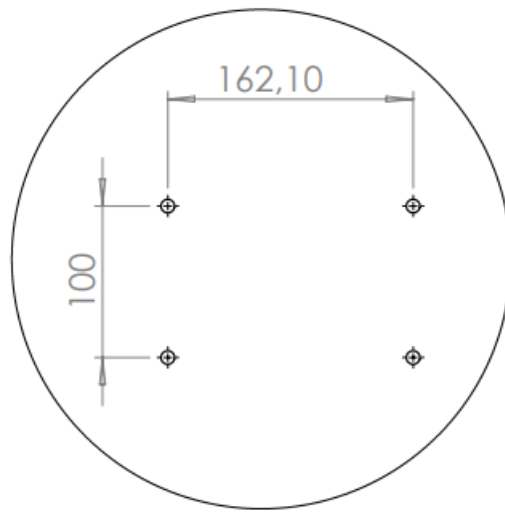


Picture 3: Distance between holes

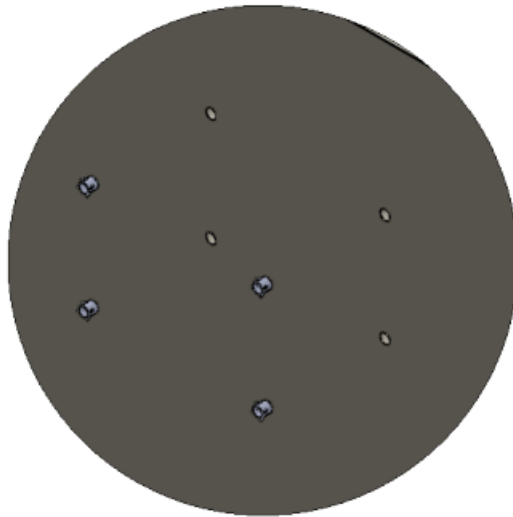

Picture 4: Demonstration of the anchor bolt sleeve fitting

2


After fitting the anchor bolt sleeves, the wall support must be secured to the wall with the self-tapping M8 screws.

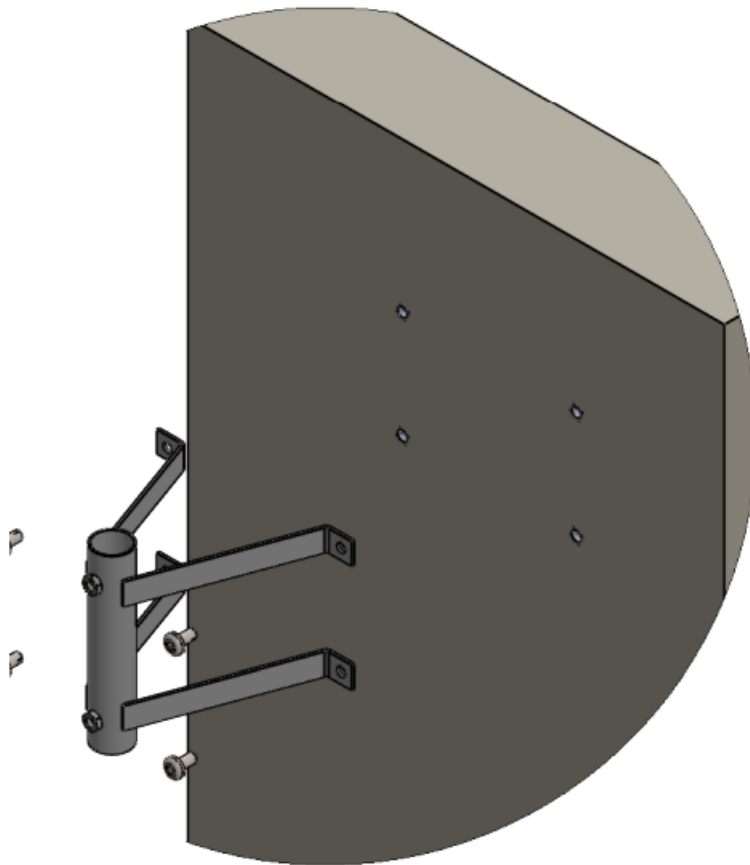

Picture 5: 2nd step demonstration


3

After securing the wall support to the wall, fit the tube and fix it using M8 screws.

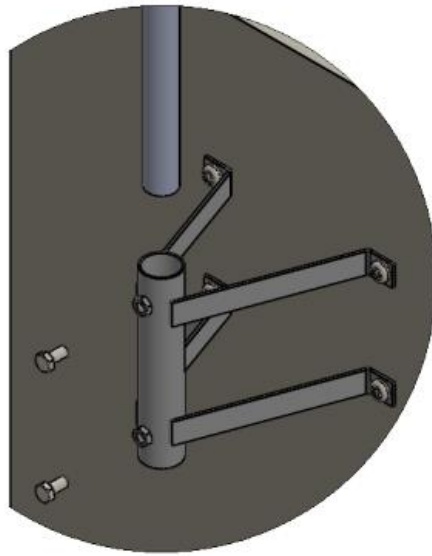

Picture 6: 3rd step demonstration

Finishing the assembly:

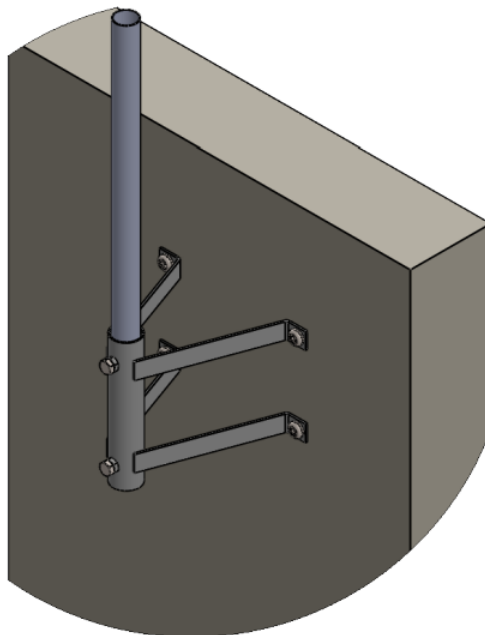

Picture 7: Assembled support